 
 
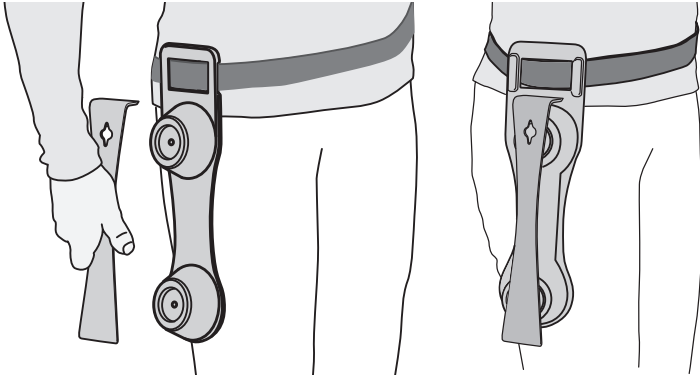 



**Magnetic
Hive Tool Holder**
USER GUIDE

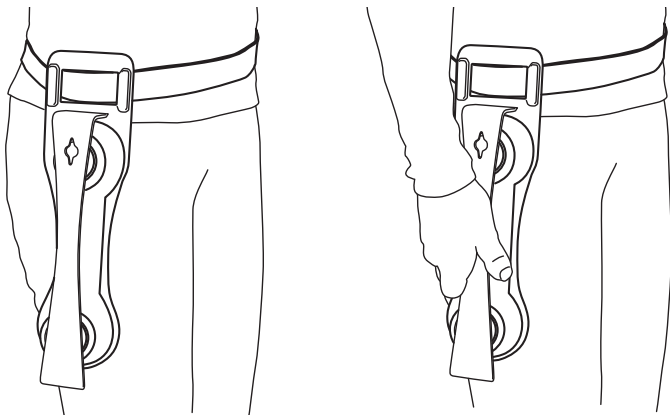

- Lace the Belt through the slots in the Magnetic Hive Tool Holder.
 - Under the outer edge
 - Over the center section
 - Under the outer edge
- Lace the Belt through the open end of the Quick Release Buckle. Make sure Belt goes over Ribs on center bar. See diagram.
- To release buckle squeeze sides. You are now ready to put on.
- Install Magnetic Hive Tool Holder
 - Put Belt around waist.
 - Clip Buckle.
 - Pull straps to adjust fit.
- Using Magnetic Hive Tool Holder
 - Place hive tool on magnets.
 - Preferred position is with short edge on top facing in.
 - To remove hive tool grip in the middle and pull.
 - To remove the Belt squeeze the sides of the Buckle.

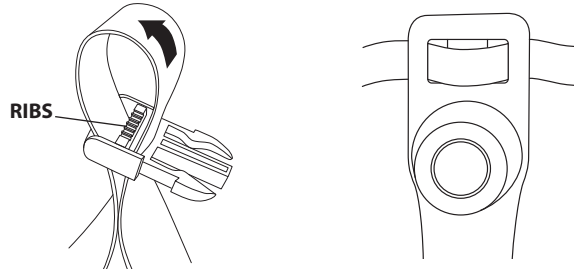

 **Magnetic
Hive Tool Holder**
USER GUIDE

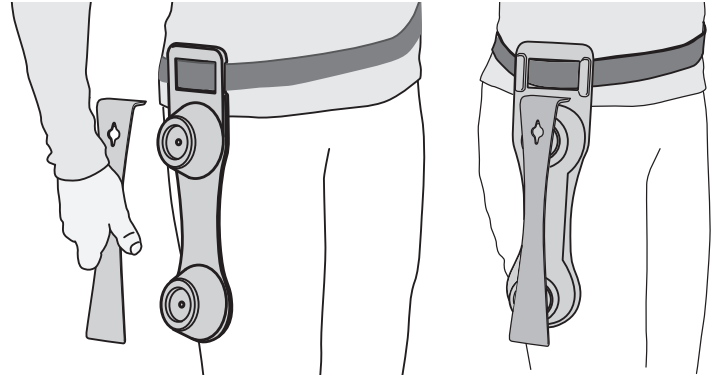

- Lace the Belt through the slots in the Magnetic Hive Tool Holder.
 - Under the outer edge
 - Over the center section
 - Under the outer edge
- Lace the Belt through the open end of the Quick Release Buckle. Make sure Belt goes over Ribs on center bar. See diagram.
- To release buckle squeeze sides. You are now ready to put on.
- Install Magnetic Hive Tool Holder
 - Put Belt around waist.
 - Clip Buckle.
 - Pull straps to adjust fit.
- Using Magnetic Hive Tool Holder
 - Place hive tool on magnets.
 - Preferred position is with short edge on top facing in.
 - To remove hive tool grip in the middle and pull.
 - To remove the Belt squeeze the sides of the Buckle.

